


SHIMANO NEXAVE Flight Deck

SC-C810 Display Unit

SW-C810 Shift Switch & Mode Changer

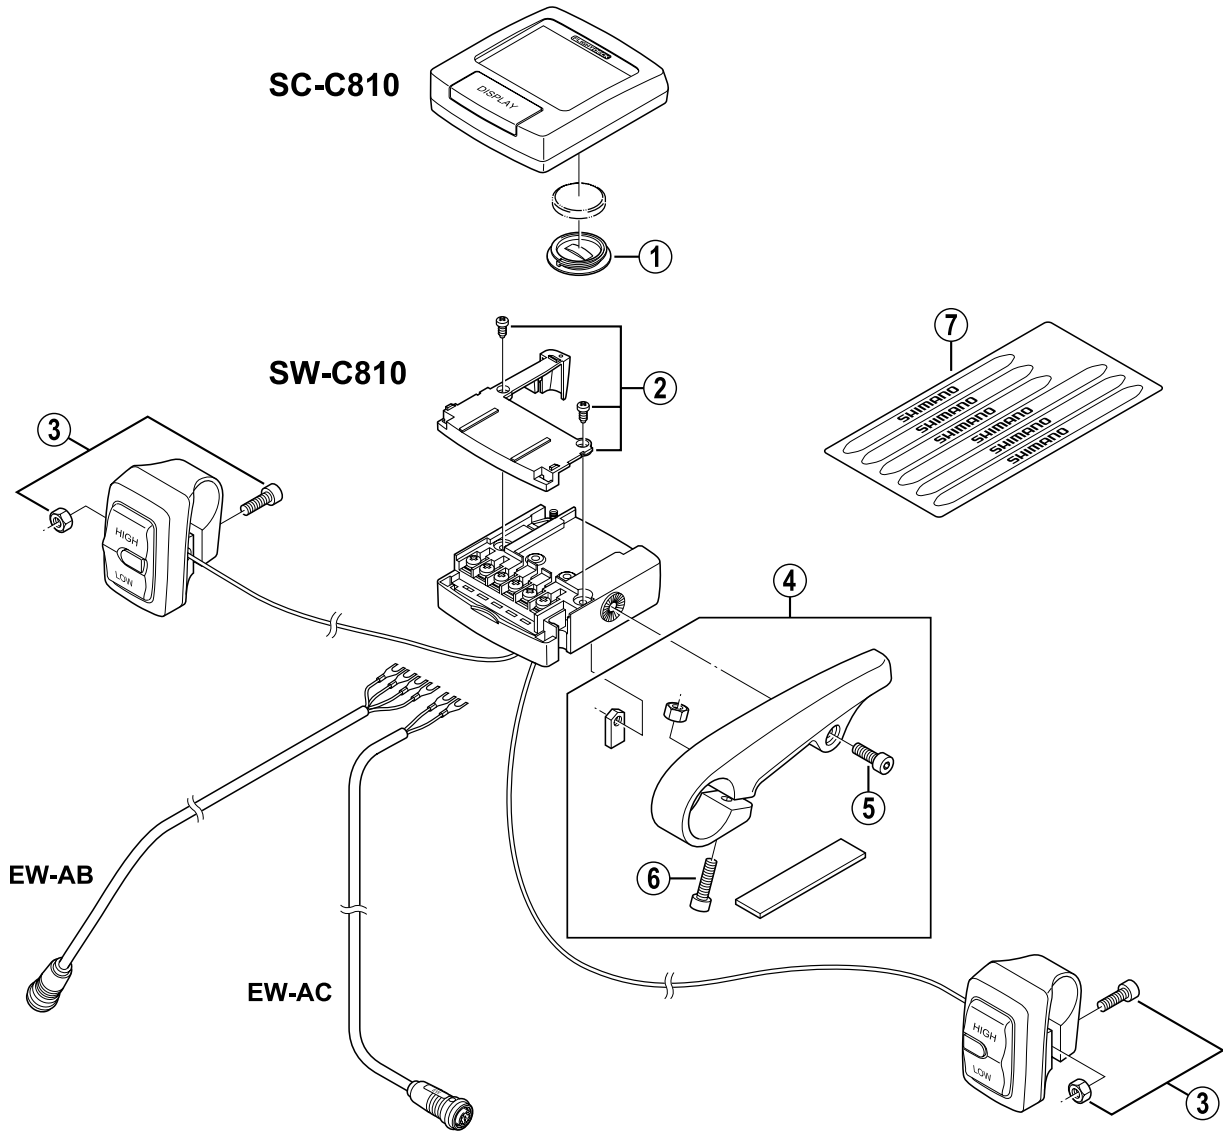

Q'TY	ITEM NO.	SHIMANO CODE NO.	DESCRIPTION
	1	Y-7B4 27000	Battery Cap
	2	Y-76R 98010	Terminal Cover & Fixing Screws
	3	Y-76R 98020	Switch Body Fixing Bolt (M4 x 12) & Nut
	4	Y-76R 98030	Clamp Band Unit
	5	Y-76R 22000	Bracket Fixing Bolt (M4 x 12)
	6	Y-76R 36000	Clamp Bolt (M4 x 16)
	7	Y-7AB 55000	Cable Stopper Tape